
 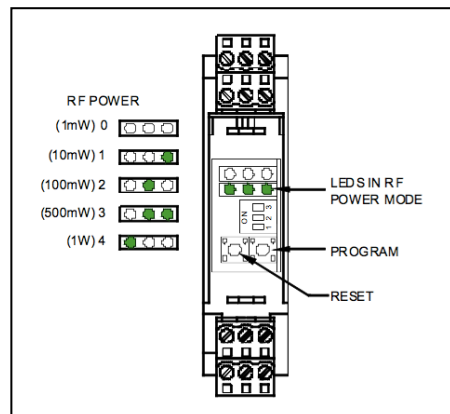


Analynk Quick Setup for WTX-A753 Transmitter and WRX-A750 Receiver


Select RF Power Use:

- **Must be done on both Tx and Rx**
- Select Dip Switch Mode 6 on Tx / Rx
- Press Reset Button, Wait for Power Up
- Press Program Button to select RF Power as per Diagram for LED Status for selection
- Hold the program button for 5 seconds
- Power LED blinks twice storing new value
- Return Dip switches to 000 Position
- Press Reset Button



Select RF Channel:

- **Must be done on both Tx and Rx**
- Select Dip Switch Mode 3 on Tx / Rx
- Press Reset Button, Wait for Power up
- Press Program Button to select Channel as per Diagram for LED Status for selection
- Hold the program button for 5 seconds
- Power LED blinks twice storing new value
- Return Dip switches to 000 Position
- Press Reset Button

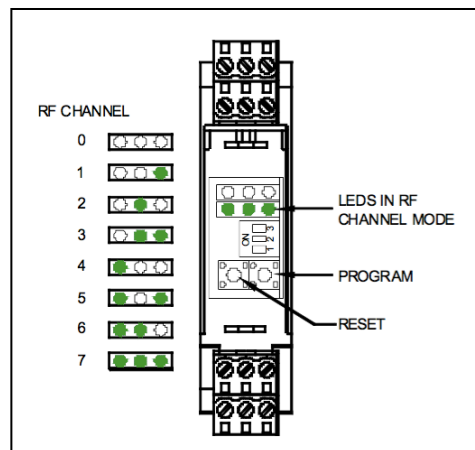

Signal Strength Check:

- **Must be done on Rx**
- Select Dip Switch Mode 4 on Rx
- Press the Rest Button, wait for Power up
- Observe RSSI (Receive Signal Strength Indication) on LED's
- Align / Trouble Shoot Communication
- Return Dip switches to 000 Position
- Press Reset Button

