



PR-3185A2 Splitter Configuration

PR-3185A2 Splitter configuration:
Link terminals 2 and 3
mA Input + on terminal 4
mA Input - on terminal 1